

## **Connecting your D LINK POE injector to power your IP handset**

Unboxing the equipment, you will have:

1 x white D Link POE unit

1 x Power Plug with UK and EU adapters

1 x Network Lead

.....

- Connect the UK adapter to the power supply unit
  
  
  
  
  
  
  
  
  
  
  
  
  
- Plug in the power to the D Link unit
  
  
  
  
  
  
  
  
  
  
  
  
  
- Connect a network lead from your Router/Network Switch/ or if you don't have spare please unplug network lead from your pc and use this to the D Link Unit
  
  
  
  
  
  
  
  
  
  
  
  
  
- Connect the Network lead either that's came with the D Link unit or another one (possible longer if required) to the D LINK Router and the desk phone

You will see two symbols – the 3 squares with joined as circled is the network connection.

\*If you have used the lead from your PC/Laptop –  
Plug in a network lead from the back of your PC/Laptop and connect to the above spare port under the phone. – this acts as a spare network port.

