

## LIP-9071 Button Layout




### Button Guide

- Touchscreen:** displays features such as extension numbers, video call, recent calls, and applications.
- Camera:** built-in HD camera used to take photos and for use during video calls.
- Ring LED:** Flashing light indicates phone ringing and voicemails.
- NFC tagging:** tap your phone on the Near Field Communications touch point.
- Home:** return to the Home screen.
- Menu:** access the settings for your phone, such as changing the font and display or changing the configuration.
- Back:** return to the previous screen.
- ECO:** Economy mode, turn the screen off.
- Transfer:** used to transfer a call to another destination.
- DND (Do-Not-Disturb):** blocks incoming calls. You can also activate Do-Not-Disturb while the phone is ringing - this terminates the call and the caller will get a fast busy tone.
- Message:** access your voicemail box.
- Hold:** place a call on hold – dependent on PBX set up, the caller will receive on-hold music.
- Headset:** if a headset is plugged in this button allows you to toggle between the headset and handset.
- Mute:** mute the call so that the caller cannot hear your voice.
- Soft keys:** Soft keys are interactive, changing function based on the phones status.
- Volume control:** adjust the Ring, Headset, Handset, and Speaker volume.
- Speakerphone:** toggle the speakerphone On and Off during a call. The button will automatically illuminate when the phone is in menu mode.
- Microphone:** Use to receive speech during handsfree call.

## Touch


### Home screen display

The home button will display icons on the right handside, messaging, a telephone icon which once pressed will direct you to call options, contacts, call log and apps. This is the default view, until an icon is pressed. To return to the default screen, press the home key.

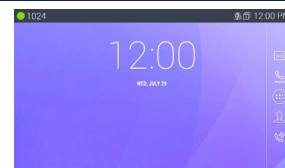

### Telephone icon from home screen

To make a call press the speakerphone button or to reach the full feature set press the telephone icon from the default home screen. This guide is based upon the display after you have pressed the telephone icon from the default home display.

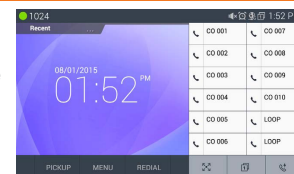

## Dealing with calls

### Incoming calls

To answer the call, lift the handset or press the speakerphone button.

### External calls

LIP-9071 has a “live dial pad” which means you do not need to lift the handset or press the Speakerphone button to start a call. To place a call, dial the desired number. Outgoing calls can also be placed from the contacts, logs as well as speed dial.

### Internal calls

Lift the handset. Dial the extension number or press the flex key assigned to the contact.

### Placing a call on hold

press **Hold** button, the button will light to indicate there is a held call.

### Rejecting a call

Press the **DND** button when a call comes in.

## Wi-Fi

### Setting up Wi-Fi

#### Connect Wi-Fi dongle to device's USB port to use Wi-Fi.\*

Then connect to a wireless access point, or "hotspot."

1. Touch Settings > Wireless & networks > Wi-Fi.
2. Slide the Wi-Fi switch to the on position.
3. The device scans for available Wi-Fi networks and displays the names of those it finds. Secured networks are indicated with a Lock icon. If the device finds a network that you have connected to previously, it automatically connects to it.
4. Touch a network name to see more details or connect to it, and type a password if necessary.

Or, if your Wi-Fi router supports Wi-Fi Protected setup, touch the WPs icon on your tablet, and then touch the same button on your router.

\*Not all dongles supported. Contact your service provider for more information.

### Add a new Wi-Fi network

You can add a Wi-Fi network so that your device will remember it, along with any security credentials, and connect to it automatically when it's in range. You must also add a Wi-Fi network if the network does not broadcast its name (SSID), or to add a Wi-Fi network when you are out of range.

## Browsing the internet

### Browsing the internet

To access the full capabilities of an internet browser including your emails directly from your LIP-9071 phone, press home, press the apps key to access the application screen containing browser, camera, play store, messaging and more.



**Berry Telecom**  
Berry Group House  
Old Sarum Park  
Lysander Way, Old Sarum  
Salisbury, Wiltshire  
SP4 6BU

**Telephone:** 0330 222 0332  
**Email:** [info@berrytelecom.co.uk](mailto:info@berrytelecom.co.uk)  
**Web:** [www.berrytelecom.co.uk](http://www.berrytelecom.co.uk)

The content of this document is subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson-LG Enterprise shall have no liability for any error or damage of any kind resulting from the use of this document

© Ericsson-LG Enterprise Co., Ltd. 2015 Version 1.0

Ericsson-LG Enterprise Co., Ltd.  
(431-749) 77, Heungan-daero 81 beon-gil, Dongan-gu, Anyang-si, Gyeonggi-do, South Korea  
[www.ericssonlg-enterprise.com](http://www.ericssonlg-enterprise.com) | [www.iPECS.com](http://www.iPECS.com)

Authorised Reseller

**iPECS**  
AN ERICSSON-LG BRAND